


风琴折，单黑说明书
材质：120g 铜版纸
成品尺寸：110*110mm



ALSEYE®

CASE FAN

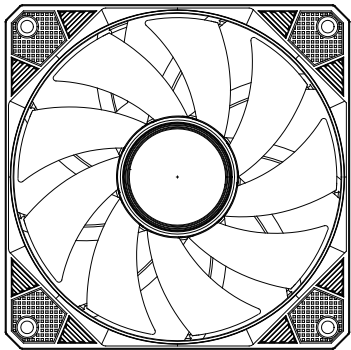

VP120 用户说明书 User Manual

深圳奥斯艾科技有限公司 ALSEYE CORPORATION LIMITED
深圳市福田区福保街道新港社区新洲南路2008号新都市商业广场三层B座309
B309, Block B, 3rd floor, Xindushi Plaza, NO.2008 Xinzhou South Road, Futian District,
Shenzhen, Guangdong Province, China
☎86-0755-23600230 ✉support@alseyecorp.com
🌐www.alseyecorp.com



2 PRODUCT PARAMETERS 产品参数

120*120*25 DC12V
Fan Speed: 1200rpm
Hydraulic Bearing Molex 4pin
Single rainbow
Accessories: Screw x 4

3 FAN ASSEMBLING 风扇组装

1. Take out the fan and fan screws from the color box,
2. Place the fan in the computer reserved installation position,
3. Use screws to fix the fan to the chassis, ensuring that the fan and the reserved position on the chassis remain vertical.
When installing, pay attention to the correct direction and position of the fan.
4. Connect the fan's wire to the power supply, making sure the power cord is firmly connected. If there is no extra fan connector on the motherboard, you can use an transferring cable to connect the fan to the power cord.
5. Start the computer and check whether the fan can work normally.

Note: Before installing and operating the fan, it is best to cut off the power supply and wear anti-static gloves to avoid electrical failure and static electricity damage to the hardware. At the same time, you also need to pay attention to whether the fan connector matches with the fan pin on the motherboard.

1. 将风扇和风扇螺丝从彩盒中取出，
2. 将风扇放置在预留的安装位置上，
3. 使用螺丝将风扇固定在机箱上，确保风扇和机箱上的预留位置保持垂直。
安装时，注意风扇的方向和位置要正确
4. 将风扇的电源线连接到电源上，确保电源线连接的牢固。如果主板上没有多余的风扇接口，可以使用转接线将风扇连接到电源线上。
5. 启动电脑，检查风扇是否正常运转。

注意事项：在安装风扇和操作之前，最好断掉电源，并且戴上防静电手套，避免电气故障和静电损坏硬件。同时，还需要注意风扇的电源接口和主板上的风扇接口是否匹配。

ALSEYE®

4 PRODUCT WARRANTY CARD 产品保修卡

USER NAME: _____
TELEPHONE NUMBER: _____
PRODUCT NAME: _____
PRODUCT MODEL: _____
DATE OF PURCHASE: _____

(Note: If the user fails to provide the purchase voucher,
then the manufacture date of the product shall prevail)

Thank you for using ALSEYE products, to enjoy better service, please read the following carefully and keep this warranty card properly.
If our products cannot work normally, you can get warranty service from the dealer by this card and purchase voucher.

However, the following situations are not applicable:

1. Damage caused by human factors, including those caused by failure to operate according to the instructions, or due to poor storage leading to damages caused by product impact, drop, bending, etc. (obvious tatty marks on the product surface, etc.);
2. Faults caused by self-disassembly, self-repair or those by non-authorized service center;
3. The user cannot provide the product warranty card and valid purchase voucher;
4. Artificial alteration of purchase records or product information;
5. Beyond the product warranty period.