

ALSEYE®


FIRST CLASS 01

SERIES CHASSIS





User Manual
说明书




360° VIEW
SEAVIEW STYLE DESIGN

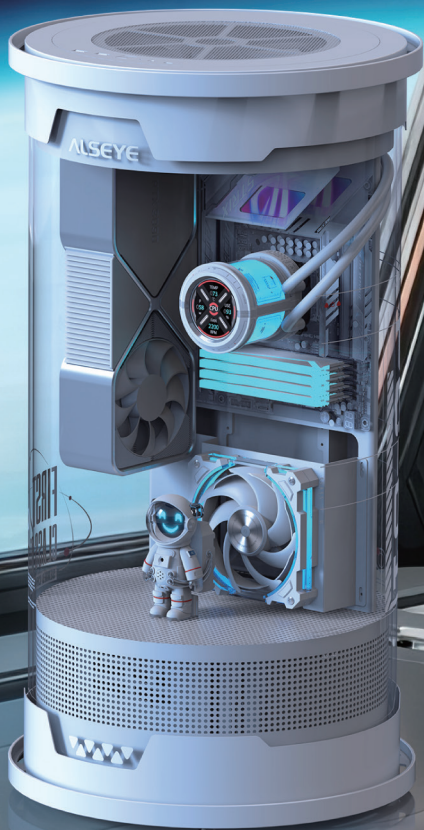


Model 型号	FC01	
Dimensions 尺寸	354×354×655mm	
Motherboard Compatibility 主板兼容性	Micro-ATX / ITX	
Material 材料	SPCC+Acrylic	
Drive Bay 光驱位	0	
HDD Bay 硬盘位	2×2.5"/2×3.5" (Combination)	
Expansion Slot 扩展槽	4	
I/O Port I/O端口	HD Audio×1+Type-C×1+USB3.0×2	
Max. CPU Cooler Height 最大CPU散热器高度	163mm	
Max. GPU Length 最大显卡长度	360mm	
Max. PSU Length 最大电源长度	180mm	
Fan 风扇	Front: 120mm×1 Top: 192mm×1	Back: 120mm×3 Bottom: 192mm×1
Liquid Cooler 水冷散热器	240/360mm×1	

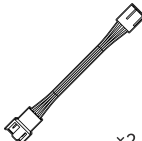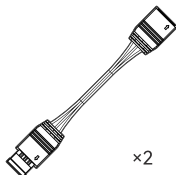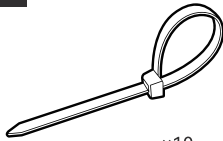 A  ×2 Hexagon Standoff 六角螺母柱	B  ×15 Motherboard / SSD Screw 主板/SSD 螺丝	C  ×15 PSU / HDD / GPU Screw 电源/HDD/显卡 螺丝
D  ×2 2510 4Pin Extension Cable 2510 4Pin延长线	E  ×2 Aura 3Pin Extension Cable Aura 3Pin延长线	F  ×10 Cable Tie 束线带
G  ×1 User Manual 说明书		H  ×1 Screwdriver 螺丝刀

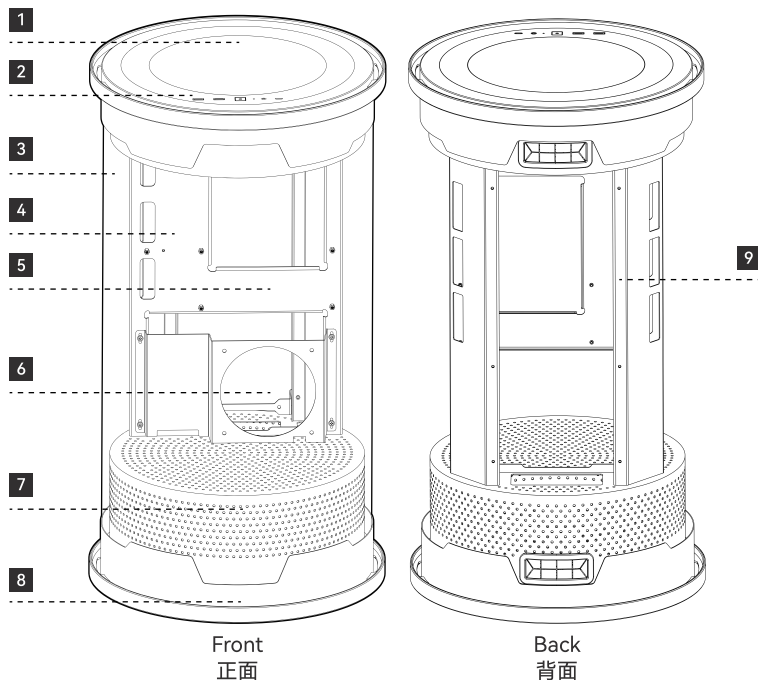


1 Top Cover 顶盖	2 I/O Panel I/O 面板
3 Acrylic Cylinder Body 亚克力主体	4 GPU Area 显卡区域
5 Motherboard Area 主板区域	6 Fan Bracket 风扇支架
7 PSU & HDD Compartment 电源仓&硬盘仓	8 Base 底座
9 Radiator Mounting Area 水排区域	


- 1** Rotate the top cover counterclockwise and the base clockwise to remove them.
安装前请将顶盖按照逆时针方向，底座按照顺时针方向旋转拆除。

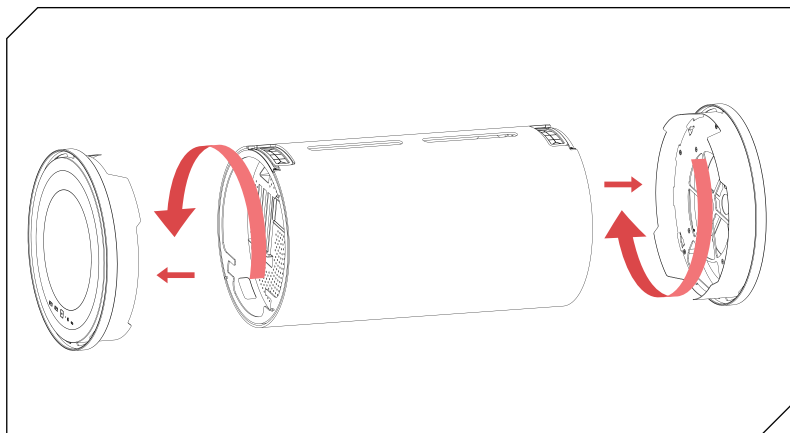


- 2** Remove the fixing screws, then slide the frame out of the acrylic body.
拆除固定螺丝，将机身从亚克力桶身抽出。

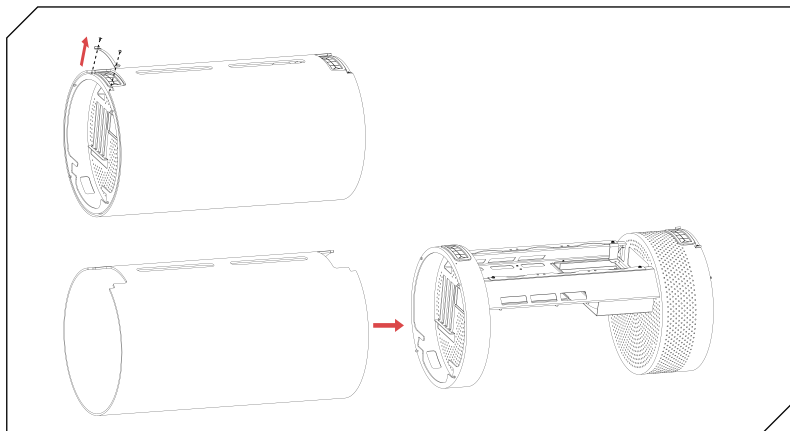


- 3** Detach the fan bracket, PSU bracket, and radiator bracket.
拆除风扇支架/电源支架/水排支架。

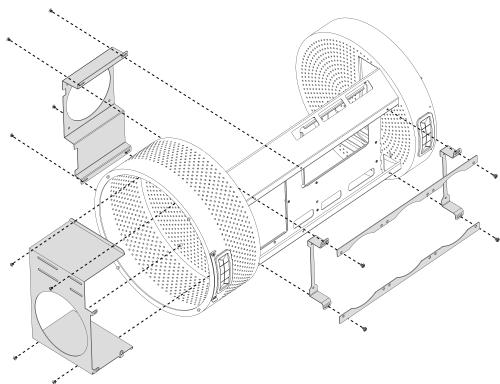


- 4** Motherboard Installation.
安装主板。

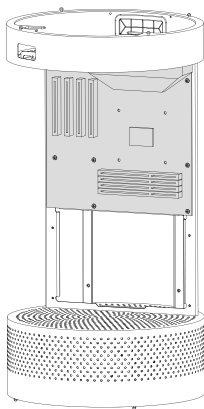

5 Liquid Cooler Installation.
安装水冷。

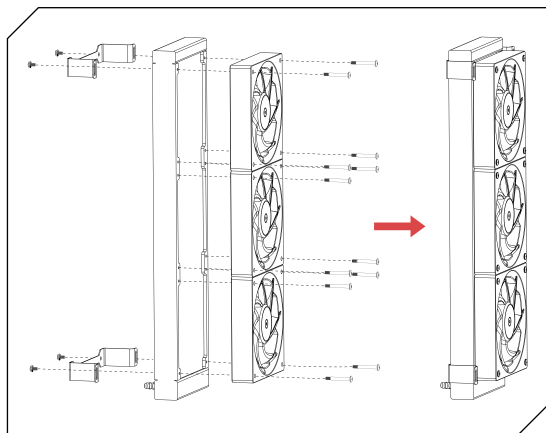


- ① Mount the liquid cooling fans and radiator onto the bracket.
将风扇和水排固定在支架上。

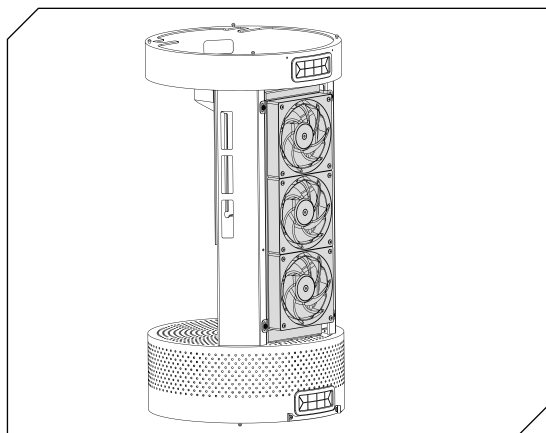

- ② Install the radiator onto the rear side of the case.
将水排安装在机箱背面。


6 PSU & HDD Installation.
安装电源和硬盘。

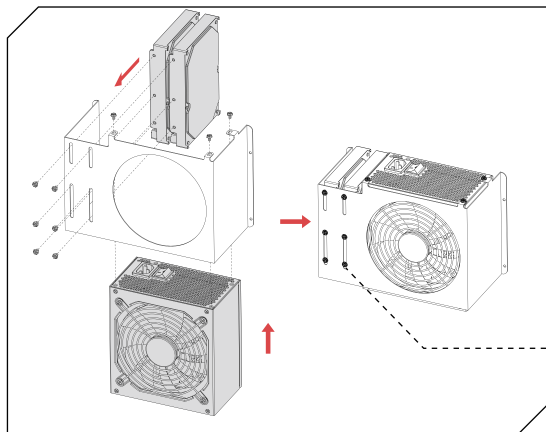

① Mount the PSU and HDD onto the PSU bracket as shown in the figure below.
如图所示，将电源和硬盘安装在电源支架上。



PSU / HDD / GPU Screw
电源/HDD/显卡 螺丝

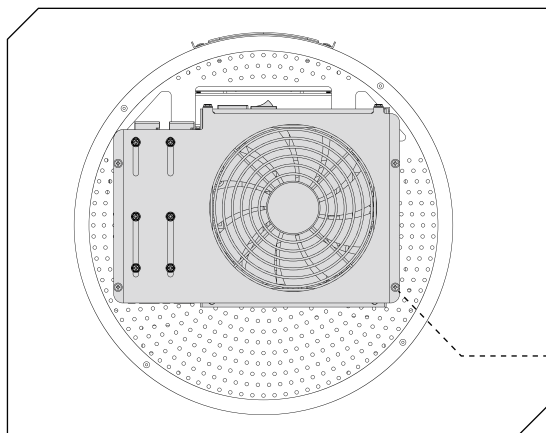


② Install the PSU bracket at the bottom of the case.
将电源支架安装在机箱底部。



Motherboard / SSD Screw
主板/SSD 螺丝

7 GPU Installation.
安装显卡。

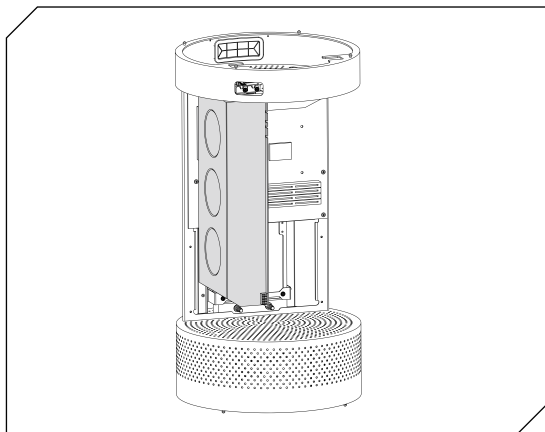

① Install the GPU onto the motherboard.

将显卡安装在主板上。


② Connect all required power cables.

将各种电源线连接好。

③ Connect the fan extension cable and Aura extension cable to the motherboard, with the other ends secured at the top.

风扇延长线和AURA延长线接好在主板上，另一端固定在顶部。

8 Base Installation.
安装底座。

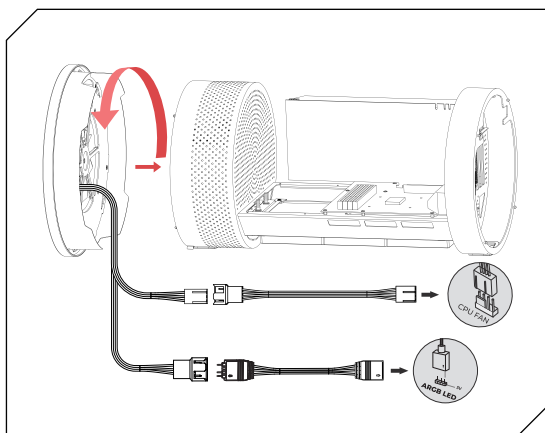


① Connect the bottom fan cables.

将底部风扇线接好。


② Rotate clockwise to install the base.

顺时针旋转，安装底座。

9 Top Cover Installation. 安装顶盖。


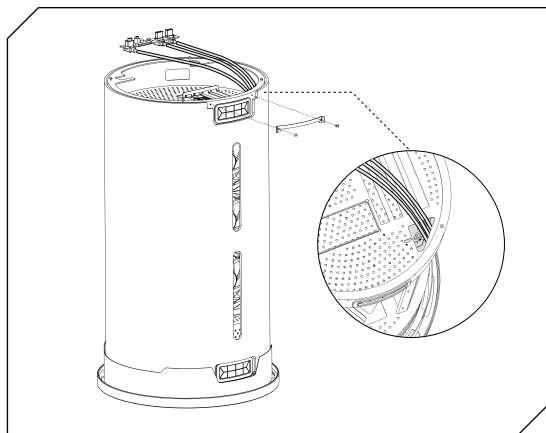


- ① Insert the I/O cables into the motherboard.
将I/O线插入主板。
- ② Slide the acrylic body back over the frame.
将亚克力桶身套入机身中。
- ③ Secure the top strip with screws.
将顶部压条锁上螺丝。

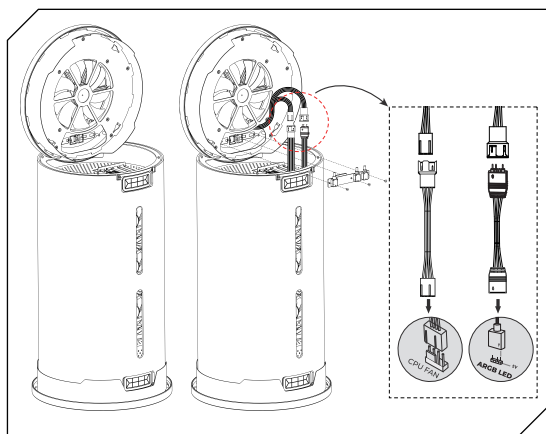


- ④ Place the top cover onto the recessed slot.
先将顶盖放在顶部凹位处。
- ⑤ Secure the I/O connectors onto the top cover.
将I/O接头锁在顶盖。
- ⑥ Connect the fan cables.
将风扇线连接好。

- 9 Rotate the top cover clockwise to lock it in place.
将顶盖按顺时针方向旋转装入机箱顶部，完成安装。

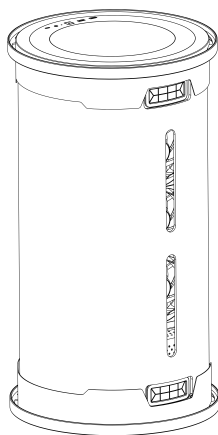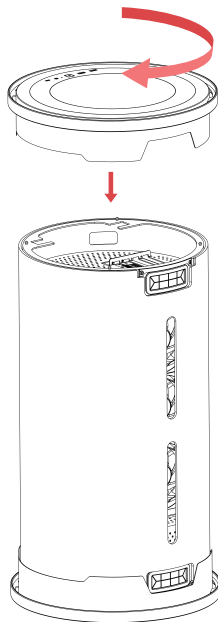

Back
背面

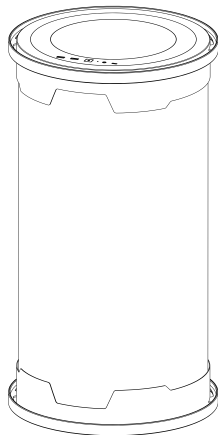

Front
正面

1. Follow this manual carefully during installation.
2. Do not disassemble the chassis or remove unspecified screws.
3. Improper handling may cause damage and void warranty.
4. Keep the chassis out of reach of children.
5. Packaging is for transport only, not suitable for shipping after components assembly.
6. Use anti-static wristband and gloves when installing PC components.
7. Incorrect cable installation may result in damage.
8. Do not modify the product, as it may cause malfunction.
9. Remove all components before moving the chassis.
10. Keep away from heat sources during storage.

1. 请遵循本使用手册的指示进行安装。
2. 请勿拆解机箱或拆卸安装说明书中未指定的任何螺丝，否则可能会导致机箱损坏/解体或造成意外伤害。
3. 操作不当可能会导致机箱损坏，因操作不当或误用而导致的所有缺陷和损坏均不在保修范围内。
4. 请勿让儿童操作机箱。
5. 产品包装只能用于机箱的运输，如果系统组件已安装，请不要使用包装，这可能会在运送过程中造成损坏。
6. 安装电脑产品的过程中，请戴上静电环及手套进行安装，否则可能会导致人员及机器的伤害与损坏。错误的接头安装严重时可能导致主板及其他零件烧毁。
7. 请勿使用错误方法进行操作或采取指定范围以外的用途，以免导致本产品及电脑相关装置损坏。
8. 请勿将本产品进行改装使用，以免发生故障。
9. 如需搬运，请先卸下机箱内所有装置，包含电源供应器、硬碟、光碟机、主板、散热器等。
10. 存放此产品时请远离高温区：如电暖器、暖气机或其他会产生高温的设备。

Product Name	User Name
Product Model	Contact Number
Purchase Date	Contact Address

***Notes:**

Thank you for using **ALSEYE**® products!
In order to enjoy better service, please read the following contents carefully and properly keep this warranty card. In case of non-human fault of the products produced by our company, the customer can present this warranty card and apply for warranty service from the original dealer with the purchase voucher.
If the user fails to provide the certificate of purchase date, the factory date shall prevail.

The following circumstances are NOT included:

1. Damage caused by human factors, including improper operation contrary to instructions, physical damage from impact, drops, or bending due to mishandling (visible wear marks, etc.).
2. Failure caused by disassembly, maintenance and modification by oneself, or maintenance at non authorized repair stations.
3. The user cannot provide the product warranty card and valid purchase voucher.
4. Artificially alter purchase records or product information.
5. The warranty period of the product is exceeded.

产品名称	用户姓名
产品型号	联系电话
购买日期	联系地址

***说明:**

感谢您使用 **ALSEYE**® 产品!
为使您能享受更好的服务, 请您仔细阅读以下内容并妥善保管好此保修卡。
本公司出品的产品在正常使用情况下若发生非人为故障, 客户可凭此保修卡及有效购买凭证向原经销商申请保修服务。
用户不能提供购买日期凭证, 则以产品出厂日期为准。

以下情况不在保修之列:

- 1.人为因素造成的损坏,包括不按说明书操作引起的故障,或因保管不善造成产品撞击、跌落、折弯等引起的损坏 (产品表面有明显磨损痕等);
- 2.私自拆卸、自行维修或改装, 或由非特约维修站点维修所引起的故障;
- 3.用户无法提供产品保修卡及有效购买凭证;
- 4.对购买记录或产品信息等人为涂改的;
- 5.超出产品保修期限。

ALSEYE®

SHENZHEN ALSEYE TECHNOLOGY CO., LTD

Block B, 3rd floor, Xindushi Plaza, NO.2008 Xinzhou South Road, Futian District,
Shenzhen, Guangdong Province, China

深圳奥斯艾科技有限公司

深圳市福田区福保街道新港社区新洲南路2008号新都市商业广场三层B座

☎ 86 - (0755) 23600230 ✉ support@alseyecorp.com 🌐 www.alseyecorp.com



Alseyecorp.com



YouTube



Facebook



Pinterest



Bilibili



TikTok



Rednote



Notes:

Please download and install the temperature display software on PC (Windows O/S only), otherwise the temperature display function will not work. The software download URL:

<https://www.alseyecorp.com/product-item/monitor>

提醒:

如果产品带屏幕请下载并安装温度显示软件(仅支持Windows系统),否则温度显示功能无法正常工作。

软件下载地址: <https://www.alseyecorp.com/product-item/monitor>

