

 

 

ALSEYE®




ROBOBOX

User Manual/说明书

Dimensions 尺寸	L460×W374×H670mm
Motherboard Compatibility 主板兼容性	Micro-ATX / ITX
Material 材料	SPCC
Drive Bays 光驱位	0
HDD Bays 硬盘位	10×2.5"/8×3.5" (Combination)
Expansion Slots 扩展槽	5
I/O Ports I/O端口	HD Audio×1+Type-C×1+USB3.0×2
Max. CPU Cooler Height 最大CPU散热器高度	140mm
Max. GPU Length 最大显卡长度	Top: 300mm Left: 365mm
Max. PSU Length 最大电源长度	200mm
Fan 风扇	Top: 92mm×1
Liquid Coolers 水冷散热器	Right: 240/360mm×1 Left: 240/360mm×1

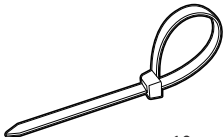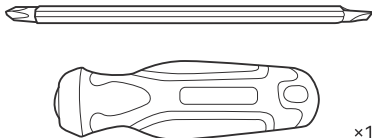A  ×2 Hexagon Standoffs 六角螺母柱	B  ×30 Motherboard / SSD Screws 主板/SSD 螺丝	C  ×30 PSU / HDD / GPU Screws 电源/HDD/显卡 螺丝
D  ×1 GPU Extension Cable 显卡延长线	E  ×10 Cable Ties 束线带	F  ×1 User Manual 说明书
G  ×1 Screwdriver 螺丝刀		

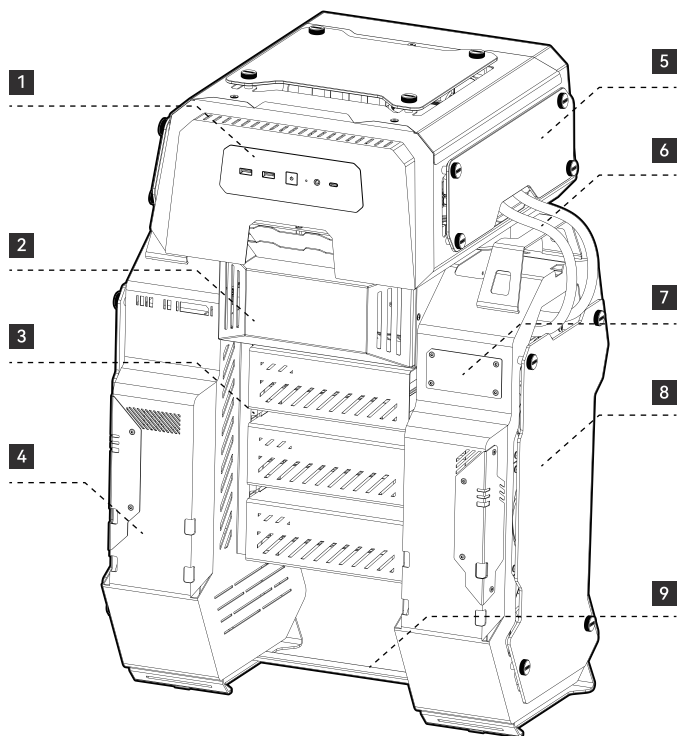

1 I/O Panel
I/O面板

3 HDD Cage
硬盘仓

5 Motherboard Tray
主板仓

7 Nameplate
铭牌

9 Beam Bracket
横梁支架


2 PSU Compartment
电源仓

4 GPU Compartment
显卡仓


6 Handle
把手

8 Liquid Cooling Chamber
水冷仓

- 1 Before installation, please remove the left/right acrylic panels, top cover, PSU shroud and HDD cage.
安装前请将左右亚克力/顶盖/电源仓盖/硬盘仓拆除。

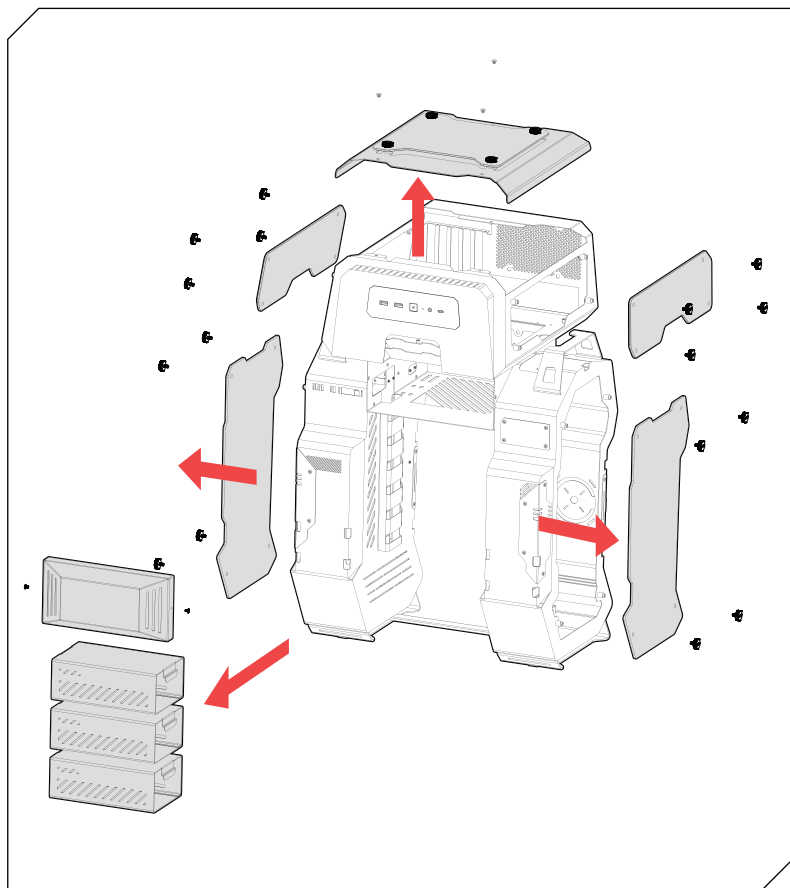

2 Motherboard Installation:
安装主板:

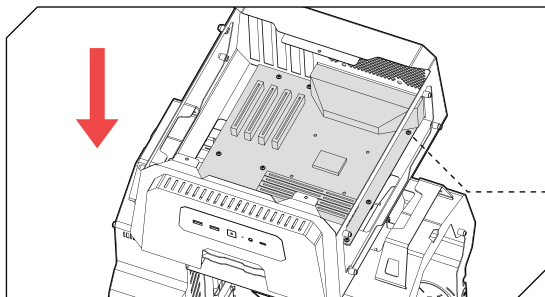

Fix the motherboard to the tray with motherboard screws.
将主板固定在主板仓底部。


B




×30

Motherboard / SSD Screws
主板/SSD 螺丝

3 Power Supply Installation:
安装电源:

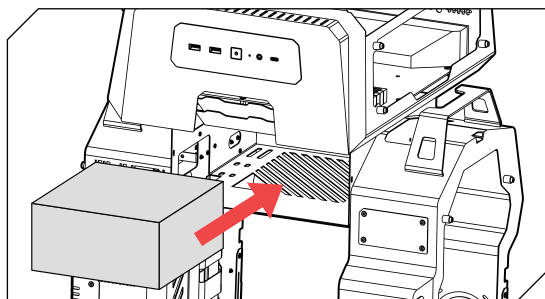

① Insert the PSU from the front into the PSU compartment.
将电源从正面放入电源仓中。

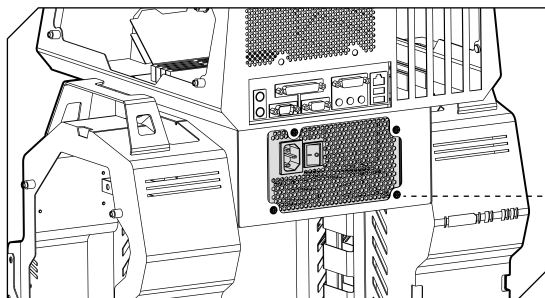

② Fix PSU on the rear side of the chassis.
在机箱背面固定电源。


C




×30

PSU / HDD / GPU Screws
电源/HDD/显卡 螺丝

4 Liquid Cooler Installation: 安装水冷:

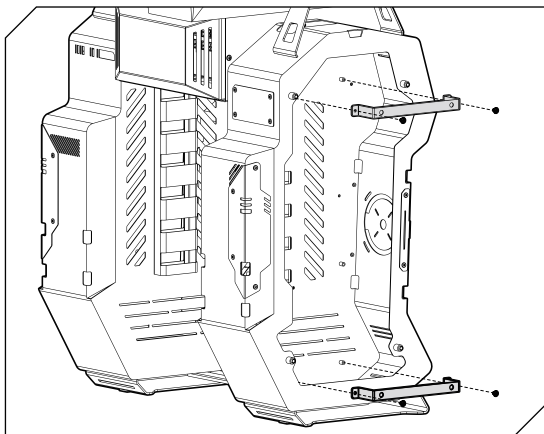


① Remove the upper and lower support brackets.
将腿部上下固定支架取下。

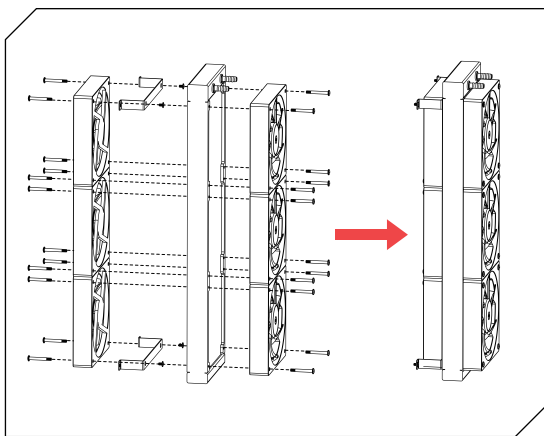


② Mount radiator and fans onto the bracket, then secure into the liquid cooler chamber. Fans cables connection diagram as below.

先将水排和风扇锁在支架上，再将支架锁在水冷仓。风扇链接线如下图所示：

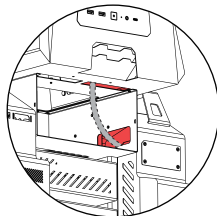

5 HDD Installation: 安装硬盘:

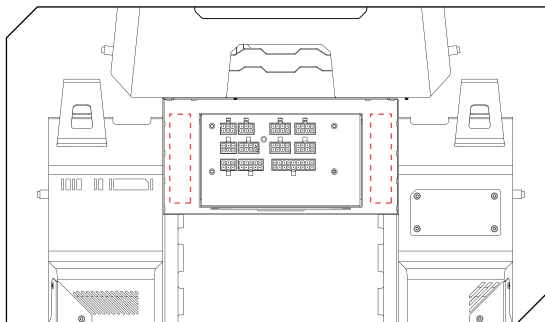


Mount SSDx2 / HDDx2 on each side of the PSU chamber.

将SSD×4/HDD×2安装在电源仓两侧。

*If an additional hard drive is installed:

*如有扩展硬盘:

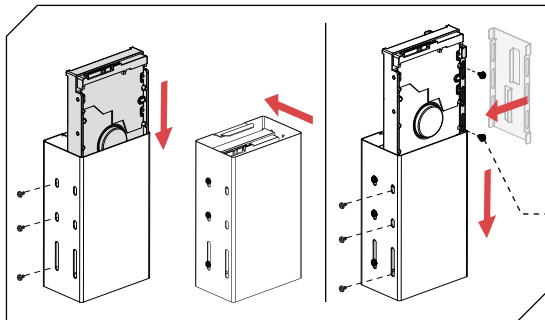


① Insert Hard Drive 1 into the cage, secure with screws. Fix the bracket to Hard Drive 2, then insert it into the drive bay and secure with screws.

将硬盘1插入硬盘仓中，再用螺丝固定硬盘；将硬盘支架固定在硬盘2上，再插入硬盘仓并用螺丝固定。




×30

PSU / HDD / GPU Screws
电源/HDD/显卡 螺丝

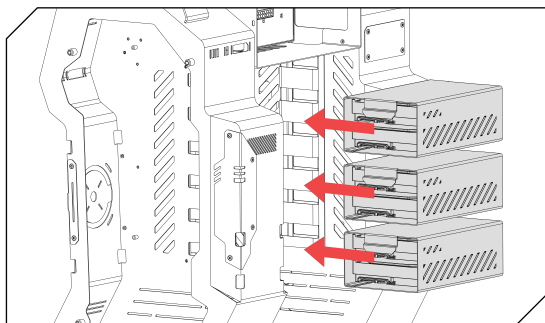


② Insert cage back into the chassis, HDD cable connection diagram as below:

将硬盘仓插入机箱中，硬盘线接线如下图所示:

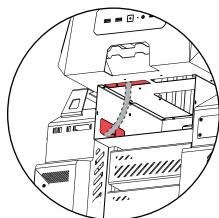


6 GPU Installation (when the GPU is installed on the left side) :
安装显卡 (显卡安装在左侧时) :


- ① Remove upper and lower support brackets.
将机箱腿部上下固定支架取下。
- ② Mount the extension cable onto bracket, then secure the GPU onto the bracket.
先将显卡延长线安装在支架上，再将显卡安装在支架上。

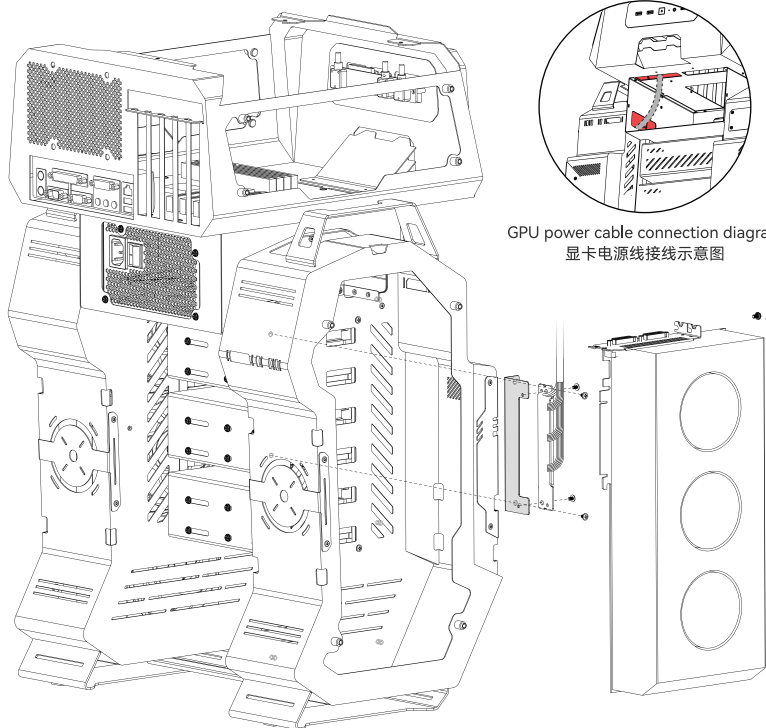


7 GPU Installation (when the GPU liquid cooler is installed on the left side) :
安装显卡 (显卡水冷散热器安装在左侧时) :

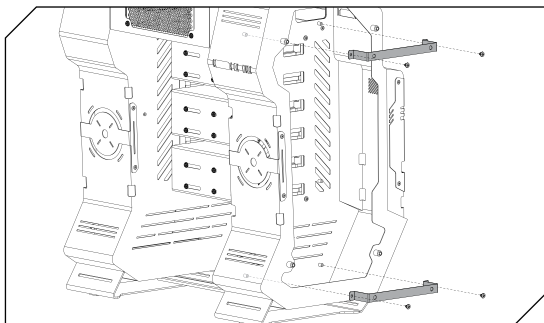


- ① Remove upper and lower support brackets.
将机箱腿部上下固定支架取下。

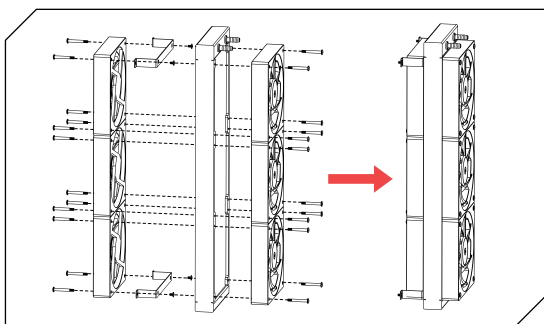

- ② Install GPU fans onto the bracket.
将显卡风扇安装在支架上。

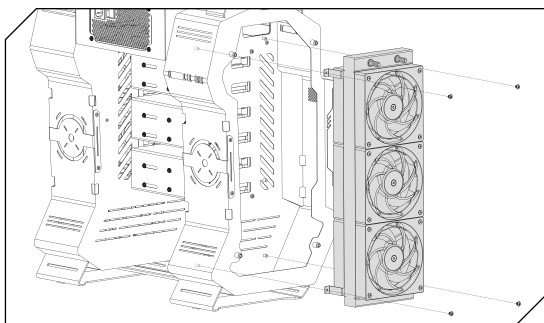


- ③ Secure the bracket with fans onto the chassis. GPU data cable connection diagram as below:
将支架及风扇安装在机箱上。显卡数据接线方式如下图所示:

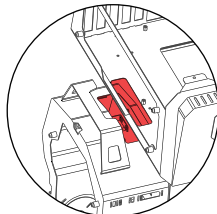

- 8** Re-install top cover, acrylic panels, and PSU shroud to complete assembly.

将顶盖/两侧亚克力面板/电源盖板安装回去完成机箱组装。

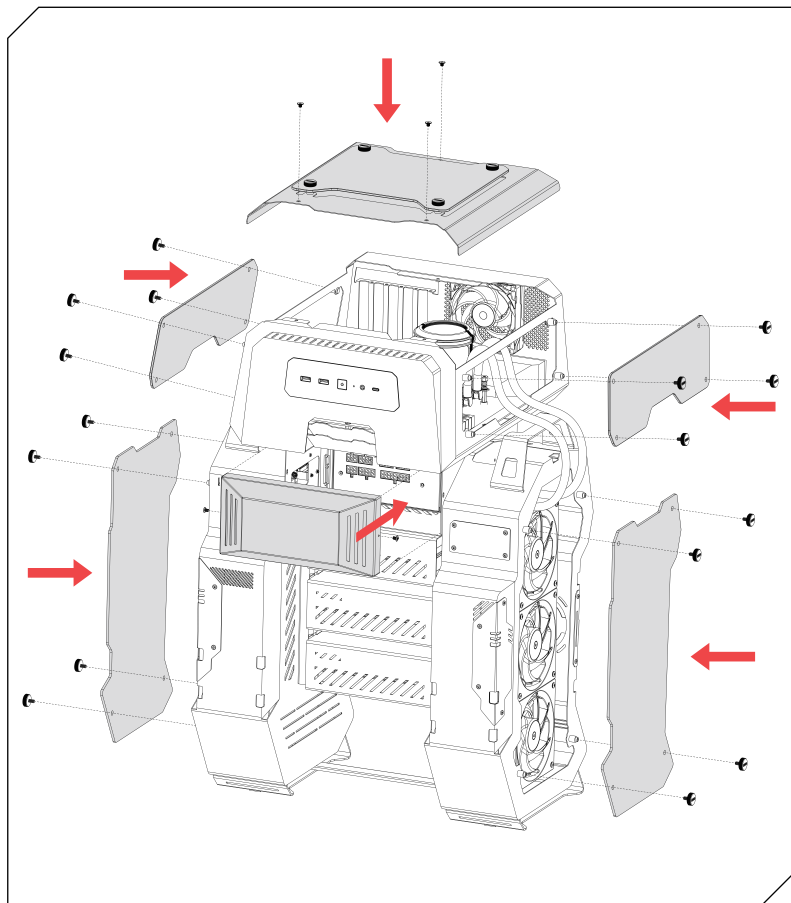

1. Follow this manual carefully during installation.
2. Do not disassemble the chassis or remove unspecified screws.
3. Improper handling may cause damage and void warranty.
4. Keep the chassis out of reach of children.
5. Packaging is for transport only, not suitable for shipping after components assembly.
6. Use anti-static wristband and gloves when installing PC components.
7. Incorrect cable installation may result in damage.
8. Do not modify the product, as it may cause malfunction.
9. Remove all components before moving the chassis.
10. Keep away from heat sources during storage.

1. 请遵循本使用手册的指示进行安装。
2. 请勿拆解机箱或拆卸安装说明书中未指定的任何螺丝，否则可能会导致机箱损坏/解体或造成意外伤害。
3. 操作不当可能会导致机箱损坏，因操作不当或误用而导致的所有缺陷和损坏均不在保修范围内。
4. 请勿让儿童操作机箱。
5. 产品包装只能用于机箱的运输，如果系统组件已安装，请不要使用包装，这可能会在运送过程中造成损坏。
6. 安装电脑产品的过程中，请戴上静电环及手套进行安装，否则可能会导致人员及机器的伤害与损坏。错误的接头安装严重时可能导致主板及其他零件烧毁。
7. 请勿使用错误方法进行操作或采取指定范围以外的用途，以免导致本产品及电脑相关装置损坏。
8. 请勿将本产品进行改装使用，以免发生故障。
9. 如需搬运，请先卸下机箱内所有装置，包含电源供应器、硬碟、光碟机、主板、散热器等。
10. 存放此产品时请远离高温区：如电暖器、暖气机或其他会产生高温的设备。

Product Name	User Name
Product Model	Contact Number
Purchase Date	Contact Address

*Notes:

Thank you for using **ALSEYE**® products!

In order to enjoy better service, please read the following contents carefully and properly keep this warranty card. In case of non-human fault of the products produced by our company, the customer can present this warranty card and apply for warranty service from the original dealer with the purchase voucher.

If the user fails to provide the certificate of purchase date, the factory date shall prevail.

The following circumstances are NOT included:

1. Damage caused by human factors, including improper operation contrary to instructions, physical damage from impact, drops, or bending due to mishandling (visible wear marks, etc.).
2. Failure caused by disassembly, maintenance and modification by oneself, or maintenance at non authorized repair stations.
3. The user cannot provide the product warranty card and valid purchase voucher.
4. Artificially alter purchase records or product information.
5. The warranty period of the product is exceeded.

产品名称	用户姓名
产品型号	联系电话
购买日期	联系地址

*说明:

感谢您使用 **ALSEYE**® 产品!

为使您能享受更好的服务, 请您仔细阅读以下内容并妥善保管好此保修卡。

本公司出品的产品在正常使用情况下若发生非人为故障, 客户可凭此保修卡及有效购买凭证向原经销商申请保修服务。

用户不能提供购买日期凭证, 则以产品出厂日期为准。

以下情况不在保修之列:

1. 人为因素造成的损坏, 包括不按说明书操作引起的故障, 或因保管不善造成产品撞击、跌落、折弯等引起的损坏 (产品表面有明显磨损痕等);
2. 私自拆卸、自行维修或改装, 或由非特约维修站点维修所引起的故障;
3. 用户无法提供产品保修卡及有效购买凭证;
4. 对购买记录或产品信息等人为涂改的;
5. 超出产品保修期限。

ALSEYE®

SHENZHEN ALSEYE TECHNOLOGY CO., LTD

Block B, 3rd floor, Xindushi Plaza, NO.2008 Xinzhou South Road, Futian District,
Shenzhen, Guangdong Province, China

深圳奥斯艾科技有限公司

深圳市福田区福保街道新港社区新洲南路2008号新都市商业广场三层B座

☎ 86 - (0755) 23600230 ✉ support@alseyecorp.com 🌐 www.alseyecorp.com



Alseyecorp.com



YouTube



Facebook



Pinterest



Bilibili



TikTok



Rednote



Reminder:

Please download and install the temperature display software on PC (Windows O/S only), otherwise the temperature display function will not work. The software download URL:

<https://www.alseyecorp.com/product-item/monitor>

提醒:

如果产品带屏幕请下载并安装温度显示软件(仅支持Windows系统),否则温度显示功能无法正常工作。

软件下载地址: <https://www.alseyecorp.com/product-item/monitor>

