


ALSEYE®

COMMANDER S


CRLS-300DS

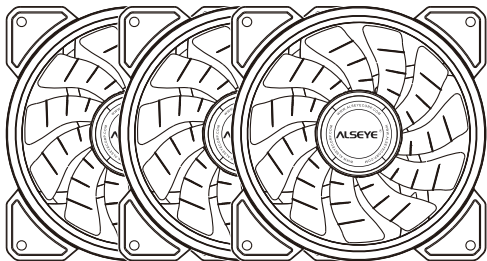

User Manual

CONNECTION DIAGRAM

D-RINGER LIGHTING

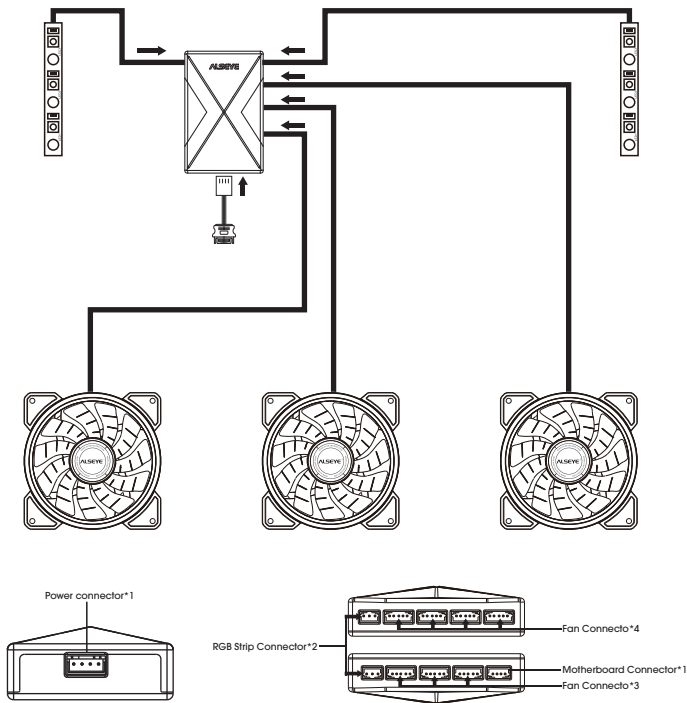


Warning:

1. Input voltage should follow product specifications. Overvoltage may cause damage.
2. Lead wire should be connected according to the connection diagram.

ARGB Controller & Motherboard SYNC installation Guide

Remote

- Ⓜ Once: ALSEYE Remote Control only, Second time: MotherBoard Control only, The Third time: OFF
- ⏩ Increase LED speed in dynamic mode
- ⏪ Reduce LED speed in dynamic mode
- ⏴ Forward to next mode
- ⏴ Backward to last mode
- 🔄 Auto cycle to run all modes
- ⊛ Reduce brightness
- ☀ Increase brightness
- 🔒 Five times: Only this remote controller can control
- ⊛ Function set key
- Ⓜ Static white
- Ⓜ Static red
- Ⓜ Static blue
- Ⓜ Static green
- ⏩ Increase fan speed in dynamic mode
- ⏪ Reduce fan speed in dynamic mode

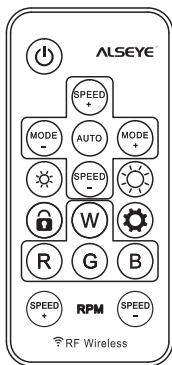

SPECIFICATIONS

Dimensions	8.3x5.3x1.8cm
Fan Connector	8pcs
RGB Strip Connector	2pcs
Working Temperature	-20°C~60°C
Effective Remote Distance	8m
N.W.	45g
Fan Voltage (low)	7V ± 0.5V
Fan Voltage (middle)	9V ± 0.5V
Fan Voltage (high)	12V ± 0.5V
Fan Speed Depends On fan Voltage	
Max. Current output	1A
Power Output	≤24W
RGB Strip Voltage Output	12V
Max.Current Output	6A
Power Output	≤72W