

ALSEYE®

//// AIR COOLER




Q-SERIES  
**Q120DT** PLUS

User Manual/说明书

# 1 Package Contents / 包装内容

**A**

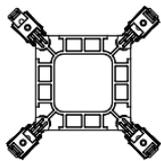


Backplate x 1

**B**



Universal bracket x 1

**C**

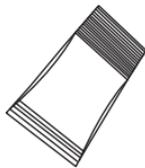

Thermal grease x 1

**D**



1700 Plastic stand x 4

**E**



AMD Plastic stand x 4

**F**



115X/1200/1366/2011  
Plastic stand x 4

**G**



Intel Screw x 4

**H**



AMD Screw x 4

**I**



2011 Screw x 4

**J**





1-to-2 Splitter cable x 1


1. Adjust the backplate A to the appropriate card slot, and tear off the adhesive protective film.

将背板A调整到适合的卡槽，撕除背胶保护膜。

2. Install backplate A to the back of the motherboard.

将背板A安装在主板背面。

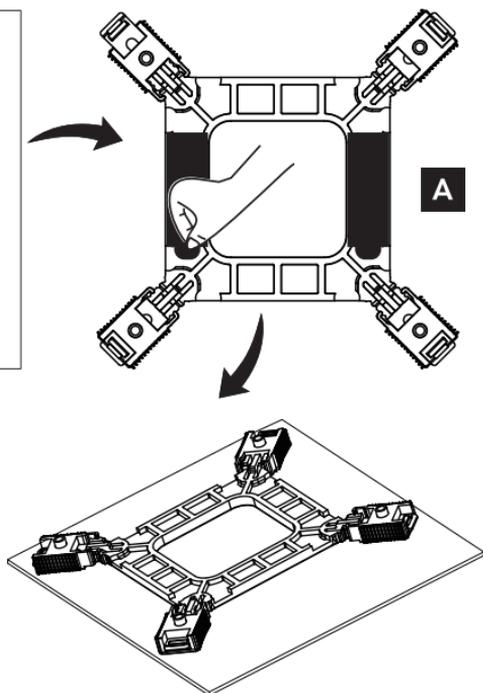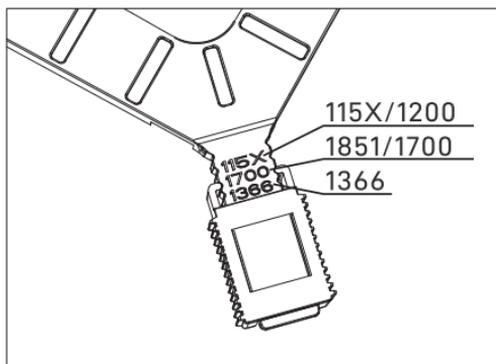

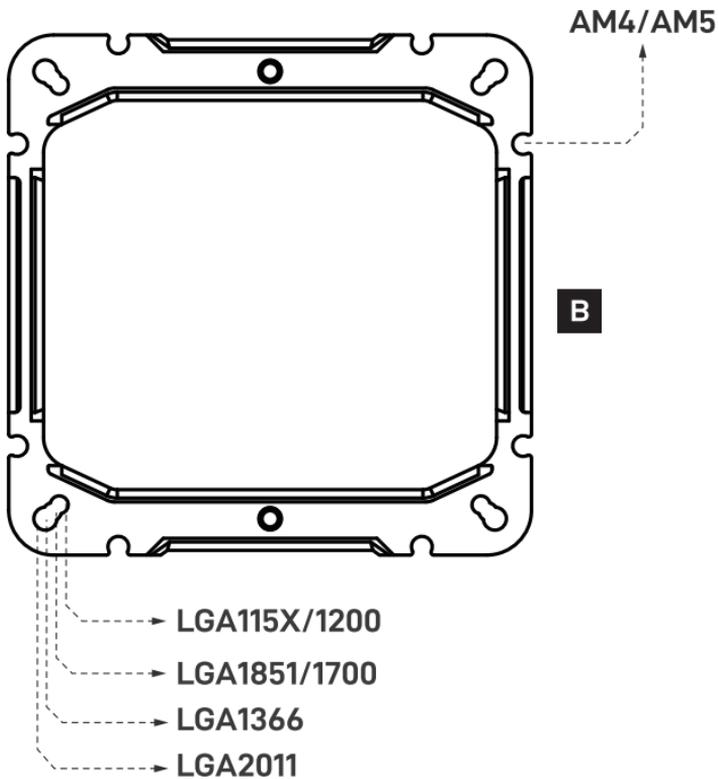


Apply thermal grease evenly.


均匀涂抹导热硅脂。




C

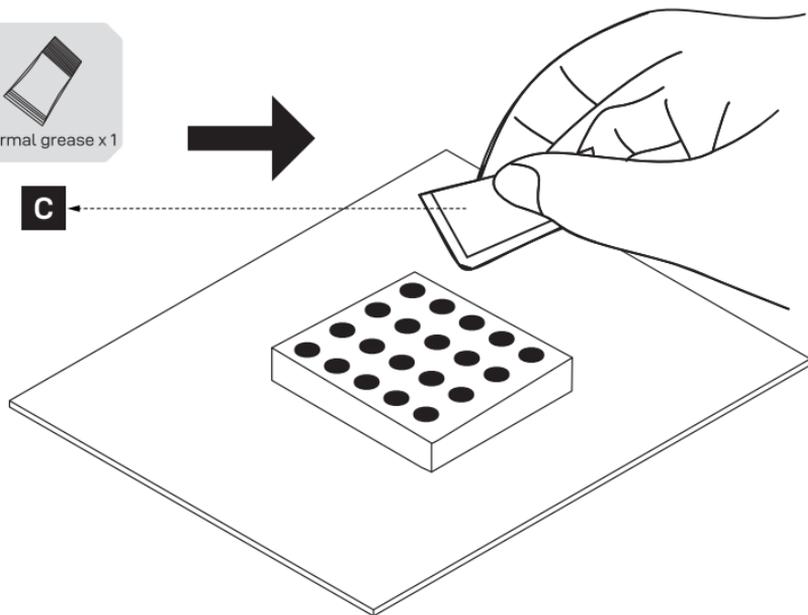


Install the bracket orderly.  
按上下顺序使用配件安装扣具。

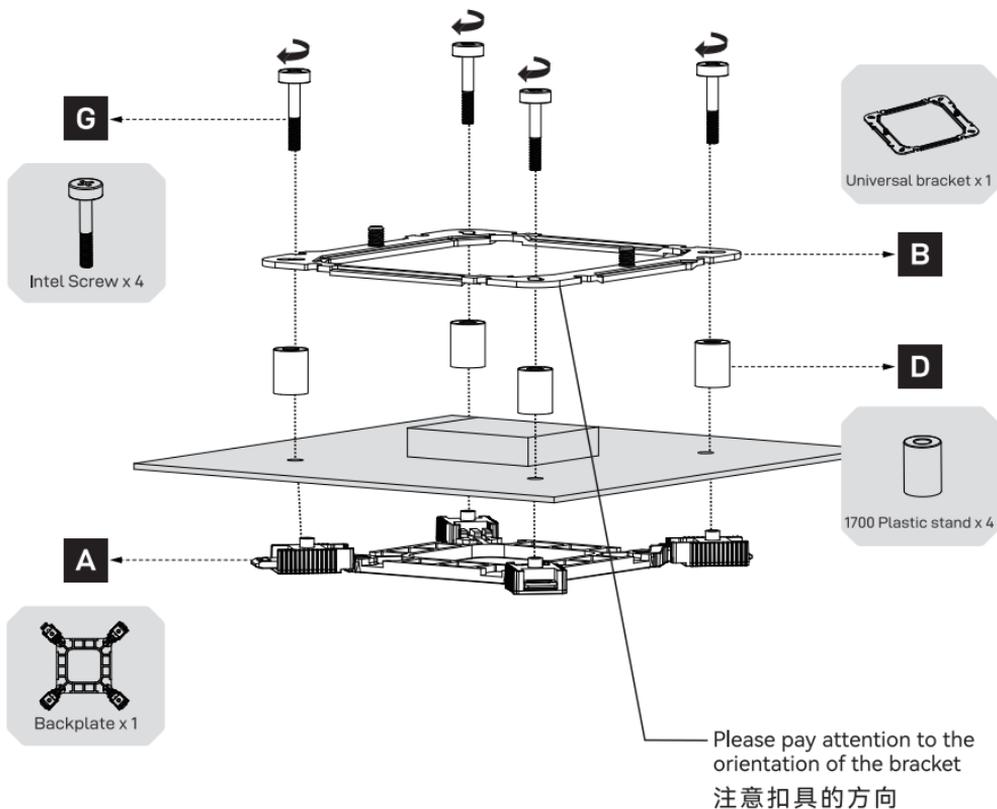

Install the bracket orderly.  
按上下顺序使用配件安装扣具。

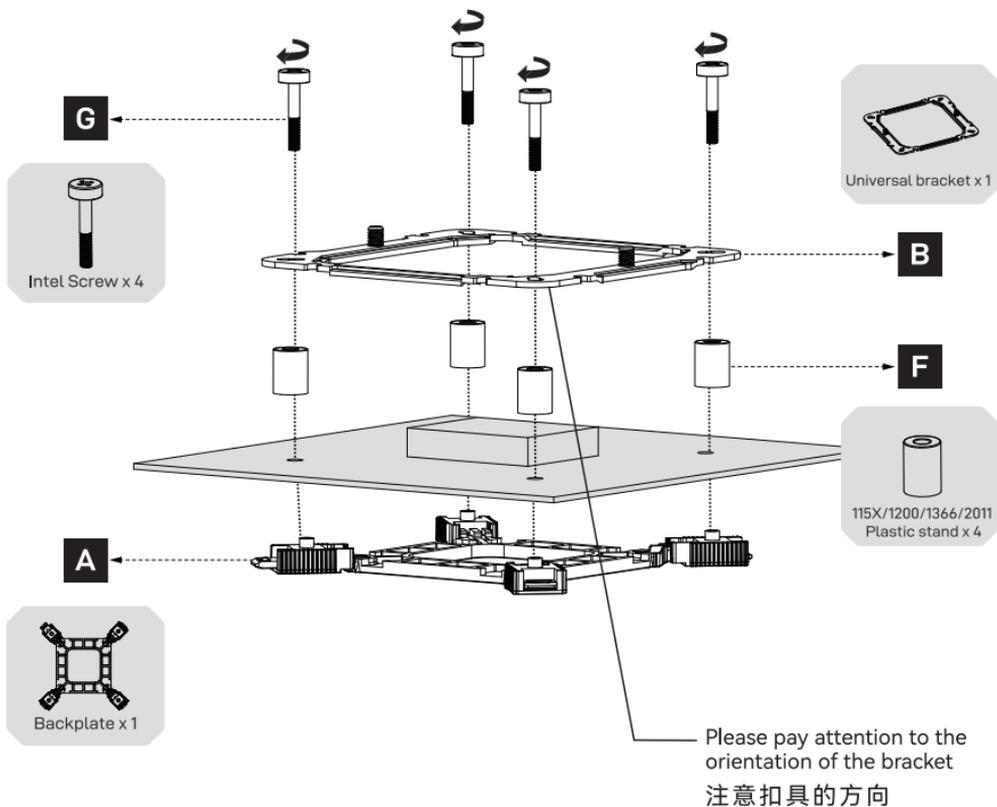


Install the bracket orderly.  
按上下顺序使用配件安装扣具。

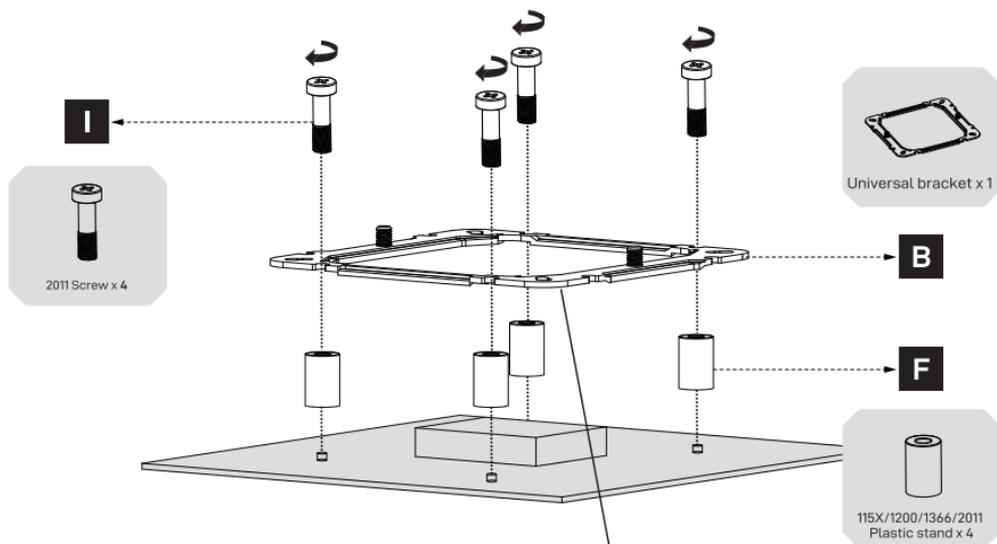


Please pay attention to the orientation of the bracket  
注意扣具的方向

1. Unscrew 4 screws and remove the original plastic bracket of the motherboard.  
拧出4颗螺丝，拆下主板原装的塑胶支架。
2. Keep the original backplate of the motherboard.  
保留主板的原装背板。

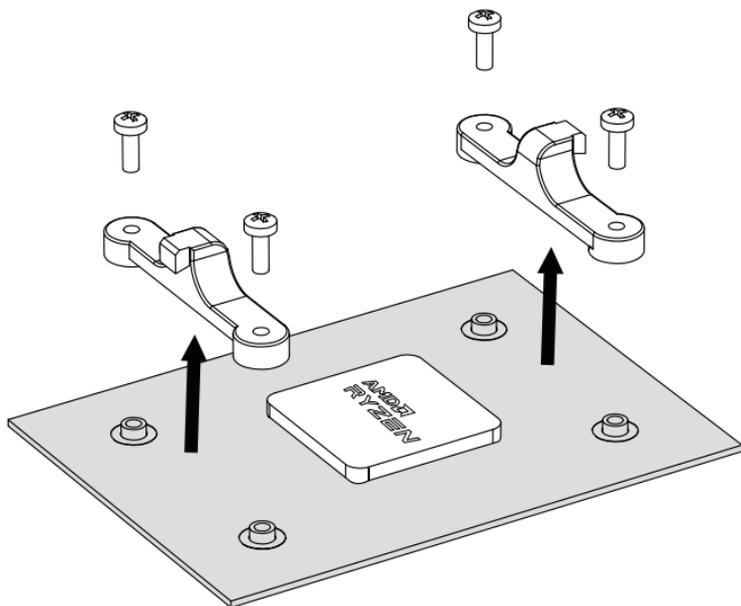


Install the bracket orderly.  
按上下顺序使用配件安装扣具。

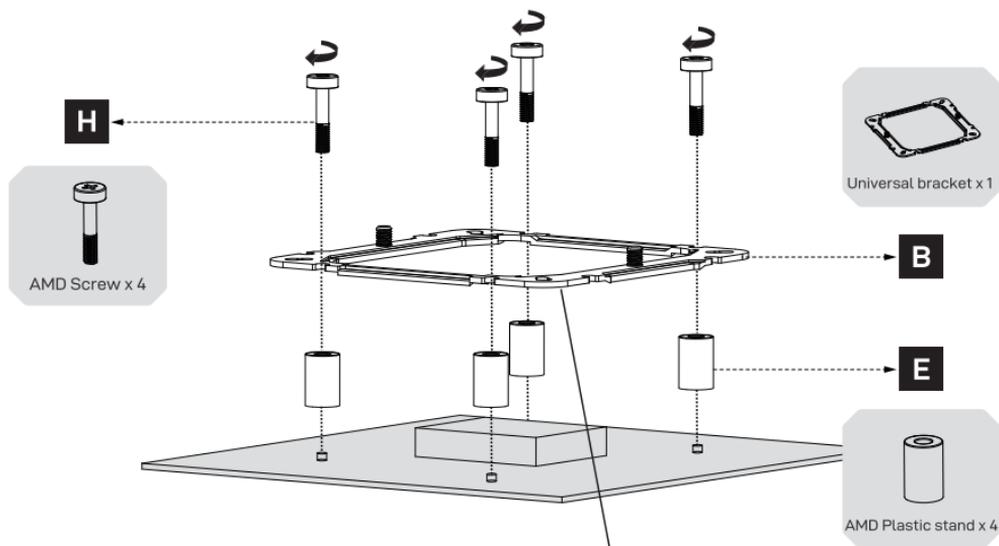

Please pay attention to the orientation of the bracket  
注意扣具的方向

Tear off the protective film of radiator bottom and fix it.


撕除散热器底部的保护膜,将散热器固定。

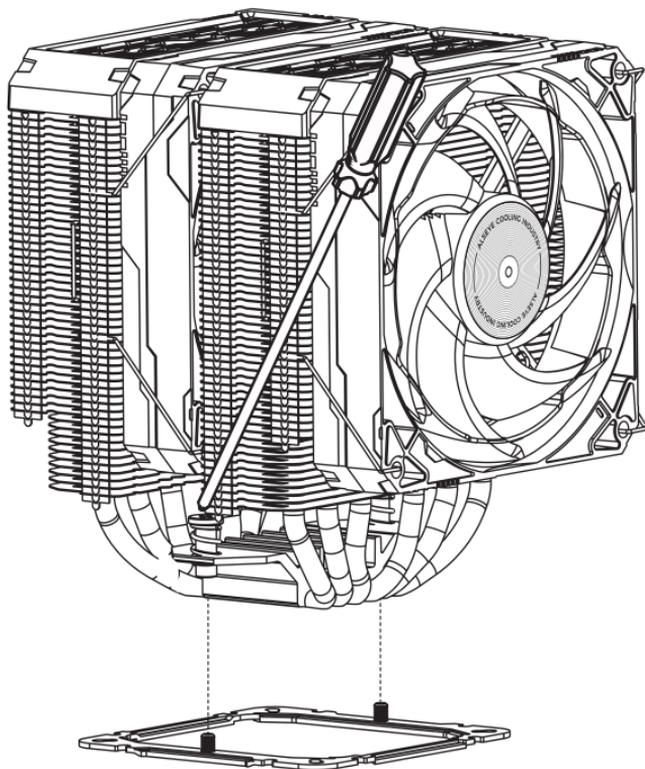

Please peel off label before you use it!

安装前需撕除!

## 6 Cable Connection/线材连接

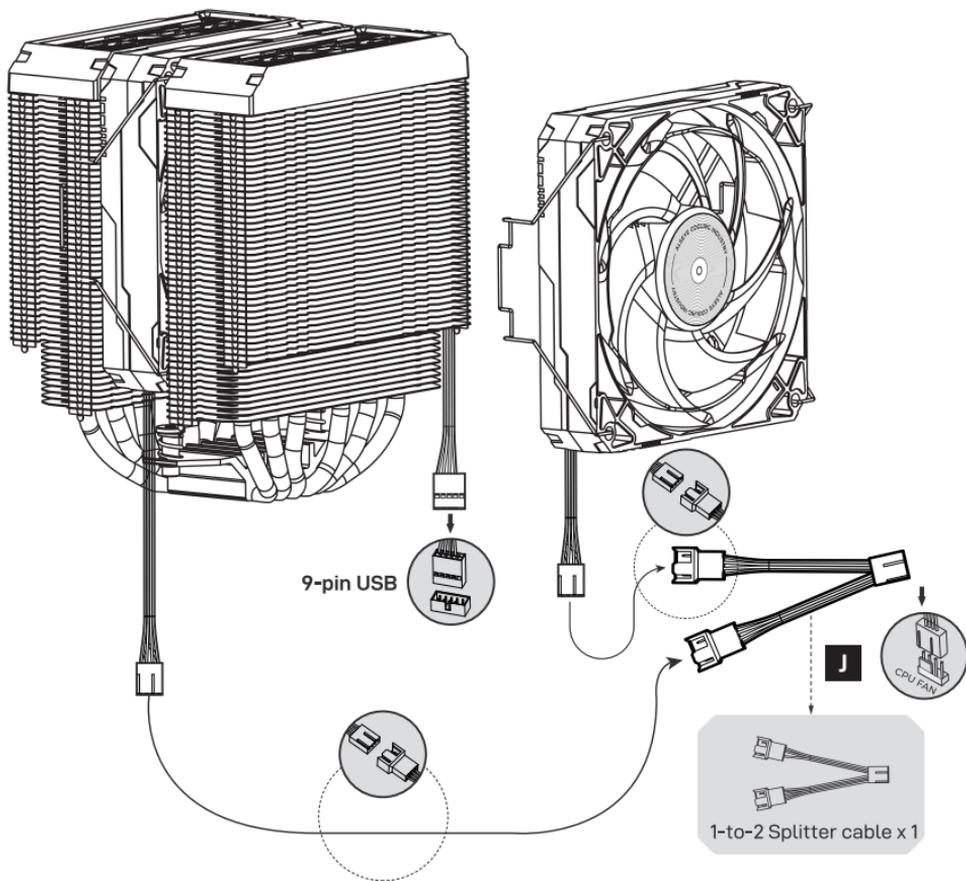

# Warranty Card/产品保修卡

Product Name	User Name
Product Model	Contact Number
Purchase Date	Contact Address

## \*Notes:

Thank you for using **ALSEYE**® products!

In order to enjoy better service, please read the following contents carefully and properly keep this warranty card. In case of non-human fault of the products produced by our company, the customer can present this warranty card and apply for warranty service from the original dealer with the purchase voucher.

If the user fails to provide the certificate of purchase date, the factory date shall prevail.

## The following circumstances are NOT included:

1. Damage caused by human factors, including improper operation contrary to instructions, physical damage from impact, drops, or bending due to mishandling (visible wear marks, etc.).
2. Failure caused by disassembly, maintenance and modification by oneself, or maintenance at non authorized repair stations.
3. The user cannot provide the product warranty card and valid purchase voucher.
4. Artificially alter purchase records or product information.
5. The warranty period of the product is exceeded.

产品名称	用户姓名
产品型号	联系电话
购买日期	联系地址

## \*说明:

感谢您使用**ALSEYE**®产品!

为使您能享受更好的服务,请您仔细阅读以下内容并妥善保管好此保修卡。

本公司出品的产品在正常使用情况下若发生非人为故障,客户可凭此保修卡及有效购买凭证向原经销商申请保修服务。

用户不能提供购买日期凭证,则以产品出厂日期为准。

## 以下情况不在保修之列:

- 1.人为因素造成的损坏,包括不按说明书操作引起的故障,或因保管不善造成产品撞击、跌落、折弯等引起的损坏(产品表面有明显磨损痕迹);
- 2.私自拆卸、自行维修或改装,或由非特约维修站点维修所引起的故障;
- 3.用户无法提供产品保修卡及有效购买凭证;
- 4.对购买记录或产品信息等人为涂改的;
- 5.超出产品保修期限。

Explore all possibilities, including the impossible.



# ALSEYE®

SHEN ZHEN ALSEYE TECHNOLOGY CO.,LTD

Block B, 3rd floor, Xindushi Plaza, NO.2008 Xinzhou South Road, Futian District, Shenzhen, Guangdong Province, China

深圳奥斯艾科技有限公司

深圳市福田区福保街道新港社区新洲南路2008号新都市商业广场三层B座

🌐 [www.alseyecorp.com](http://www.alseyecorp.com)

☎ 86 - (0755) 23600230

✉ [support@alseyecorp.com](mailto:support@alseyecorp.com)



Official Website



YouTube



Facebook



Pinterest



Bilibili



TikTok



Rednote



### Notes:

Please download and install the temperature display software on PC (Windows O/S only), otherwise the temperature display function will not work. The software download URL:

<https://www.alseyecorp.com/product-item/monitor>

### 提醒:

如果产品带屏幕请下载并安装温度显示软件(仅支持Windows系统),否则温度显示功能无法正常工作。

软件下载地址: <https://www.alseyecorp.com/product-item/monitor>

