



尺寸:130\*130MM 100g双胶纸压 线

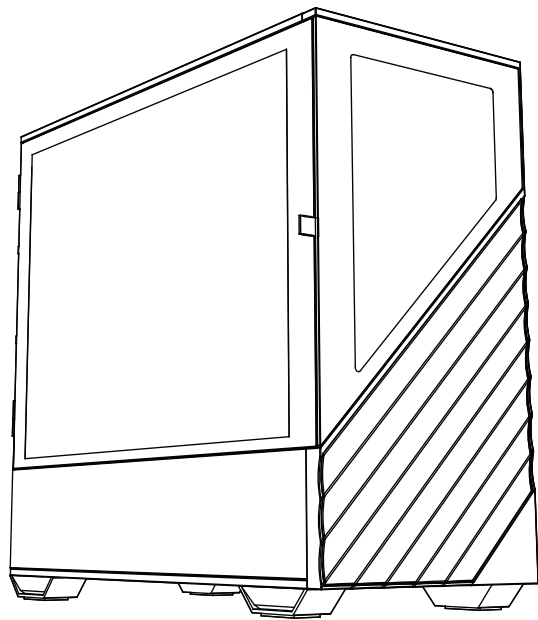

USER MANUAL

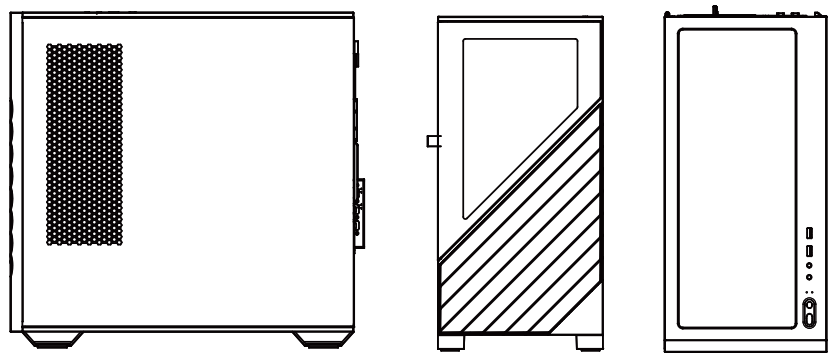

A.MOTHERBOARD

- 1.THE HOLES OF MOTHERBOARD SCREW ALIGN WITH THE HEXAGON PILLARS
- 2.FIX THE MOTHERBOARD AND CASE WITH MOTHERBOARD SCREW
- 3.CPU MAX H:165MM

MOTHERBOARD SPECIFICATIONS

MICRO ATX

B. VGA CARD

- 1.INSERT THE VGA CARD TO THE CARD SLOT OF MOTHERBOARD
- 2.FIX THE VGA CARD WITH SCREWS
- 3.RESERVING THE VGA CARD SLOTS FOR THE CASE
- 4.VGA MAX L:370MM

C.POWER SUPPLY

- 1.THE HOLES OF PSU ALIGN WITH THE RESERVED HOLE FOR CASE
- 2.FIX WITH THE SCREWS

D.HDD

- 1.SUPPORT HDD\*2
- 2.THE SCREW HOLES OF HDD ALIGN WITH THEHDD HOLES, LOCKED THE HDD SCREWHDD

E.SSD

- 1.SUPPORT "SSD\*1
- 2.THE HOLES OF SSD ALIGN WITH THE RESERVED HOLEFOR CASESSD
- 3.FIX SSD WITH THE MOTHERBOARD SCREWS

F LIQUID COOLER

- 1.TOP: 360mm

G.FAN

- 1.MOTHERBOARD:120mm\*2
- 2.REAR WINDOW:120mm\*1
- 3.TOP:120mm\*3
- 4.BOTTOM:120mm\*3
- 5.FRONT:120mm\*2

Motherboard: Micro ATX
Panel interface: USB1.0*2+Audio, USB3.0*1
Optical drive: not supported
Hard drive: SSD*1+HDD*2
Product size: L440*W210*H425mm
Hardware size: L420*W210*H402mm
Packing size: L485*W262*H493mm
40HQ:1050PCS
Standard glass side panel on the left
Fan: motherboard: 12*2 rear window 12*1
Top 12*3 Bottom 12*3 Front panel 12*2
CPU height limit: 165MM
The graphics card length is limited to 370mm
Net weight:3.4KG
Gross weight:4.5KG
Water cooling:The top supports 360 water cooling