



尺寸:130*130MM 100g双胶纸压线

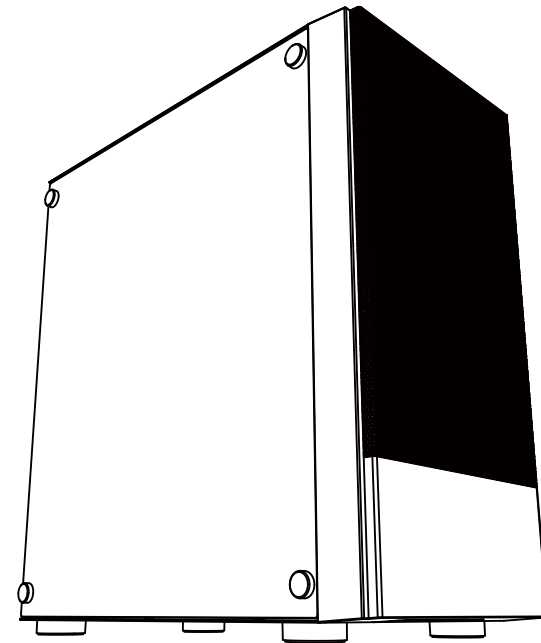

USER MANUAL

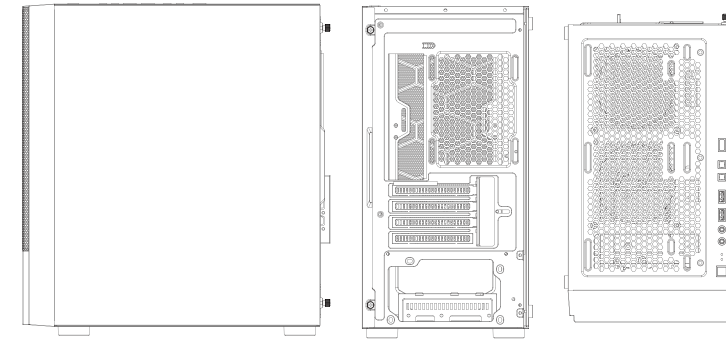

A.MOTHERBOARD

- 1.THE HOLES OF MOTHERBOARD SCREW ALIGN WITH THE HEXAGON PILLARS
- 2.FIX THE MOTHERBOARD AND CASE WITH MOTHERBOARD SCREW
- 3.CPU MAX H:160MM

MOTHERBOARD SPECIFICATIONS

MICRO ATX/ITX

B. VGA CARD

- 1.INSERT THE VGA CARD TO THE CARD SLOT OF MOTHERBOARD
- 2.FIX THE VGA CARD WITH SCREWS
- 3.RESERVING THE VGA CARD SLOTS FOR THE CASE
- 4.VGA MAX L:330MM

C.POWER SUPPLY

- 1.THE HOLES OF PSU ALIGN WITH THE RESERVED HOLE FOR CASE
- 2.FIX WITH THE SCREWS

D.HDD

- 1.SUPPORT HDD*2
- 2.THE SCREW HOLES OF HDD ALIGN WITH THEHDD HOLES,
LOCKED THE HDD SCREWHDD

E.SSD

- 1.SUPPORT SSD*1
- 2.THE HOLES OF SSD ALIGN WITH THE RESERVED HOLEFOR CASESSD
- 3.FIX SSD WITH THE MOTHERBOARD SCREWS

F LIQUID COOLER&FAN

- 1.FRONT:120mm*3
- 2.TOP:120mm/140mm*2
- 3.REAR:120mm*1
- 4.TOP:120mm*2
- 5.TOP OF THE POWER WAREHOUSE:120mm*2

Motherboard Compatibility: Micro-ATX/ITX
I/O Ports: HD Audio,USB3.0*1 ,USB2.0*2(Top)
Drive bay: HDD*2;/1,SSD*1
Dimensions
Carton Dimensions: 480*240*445mm
Case Dimensions: 365*210*422mm
Fan/Water Cooling Support
Front:120mmFan*3
Top:120mm/140mmFan*2
Rear:120mmFan*1
Top of the power warehouse: 120mmFan*2
PCI-E Expand the position: 4
Material thickness: 0.5mm
Max CPU Cooler Height: 160mm
Max VGA Length: 330mm